



FIGURE 1

NOTE: Disconnect battery from the main IIDAS controller before installing the IIDAS XT

IIDAS XT MODULE INSTALLATION INSTRUCTIONS

The IIDAS XT module is designed to work in a daisy-chain configuration. The XT module interfaces with an IIDAS controller. You will need a 9VDC battery. Locate a clear space on the door, inside the equipment, near the lock assembly. Remove the two-sided tape backing from the XT module and attach it with the trigger LED facing upward. Remove the two-sided tape backing from the 9VDC battery holder and attach it within wire length of the XT module. Remove the two-sided tape backing from the switch portion of the magnetic contact assembly and attach it to the inside of the equipment door. Remove the two-sided tape backing from the magnet portion and attach it parallel to the switch portion (max. gap 1/2"). Make wire connections as shown in Figure 1. Do not use more than six (6) XT modules with each IIDAS controller.

BRW Control Systems Inc.

1747 E. Ave Q. Ste E-5 Palmdale, CA 93550 (800) 235-6740
 E-Mail: sales@brwcontrol.com Internet: www.brwcontrol.com